

FIG. 1

+

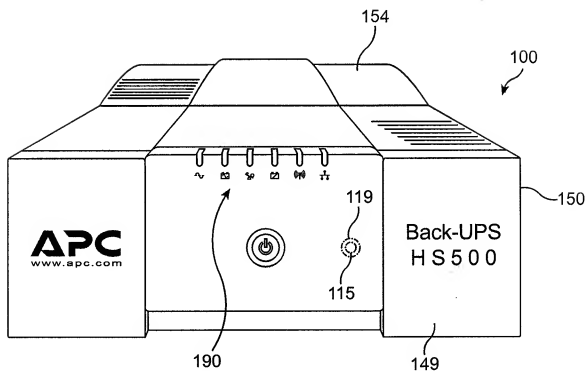


FIG. 2

+

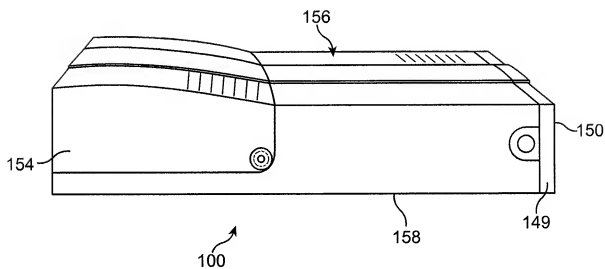


FIG. 3

+

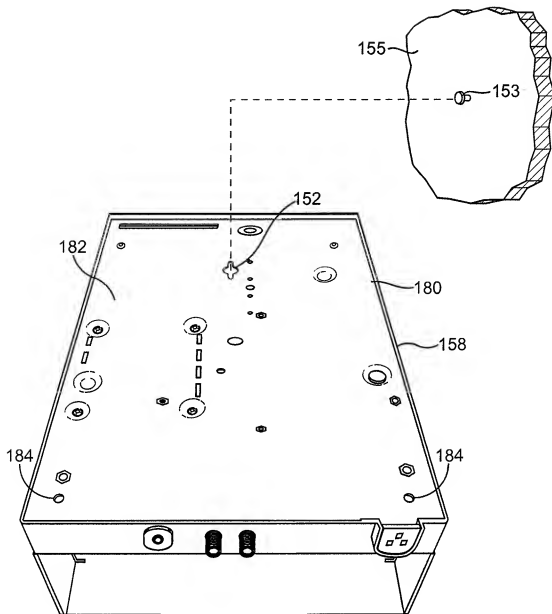
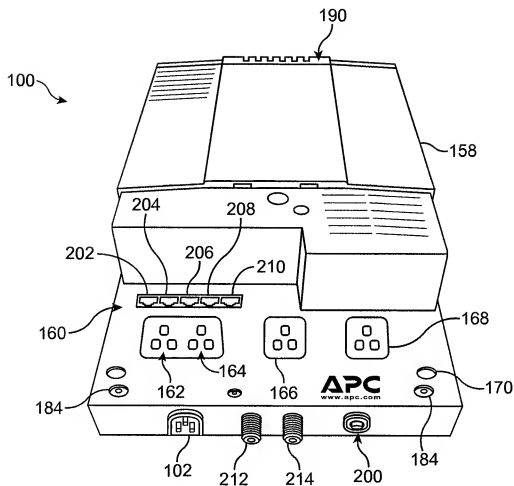


FIG. 4

+



**FIG. 5**

+

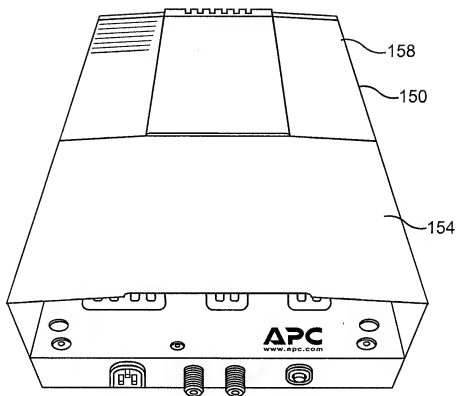


FIG. 6

Replacement Sheet

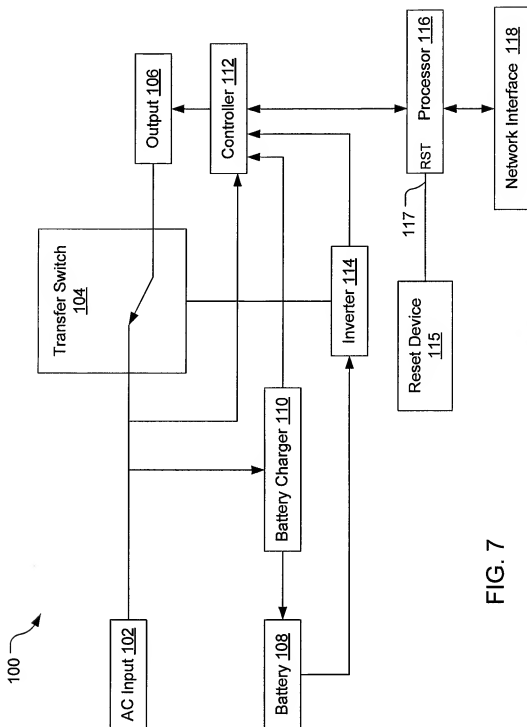


FIG. 7

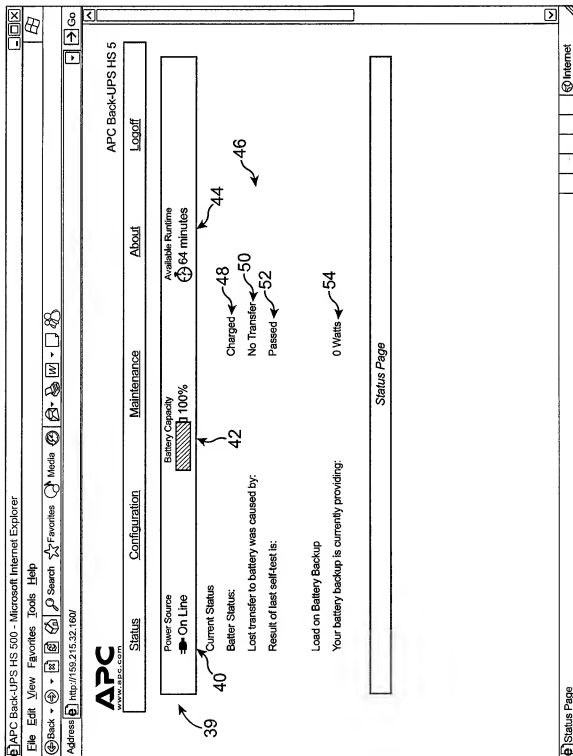


FIG. 8



APC Back-UPS HS 500 - Microsoft Internet Explorer

File Edit View Favorites Tools Help

Back Search Favorites Media

Address http://159.215.32.160/

APC Back-UPS HS 5

www.apc.com

Status Configuration Maintenance About Logout

Sensitivity  
☐ High  
☒ Medium  
☐ Low

Audible Alarm  
☒ Enable  
☐ Disable

Transfer Points  
Your battery backup will intervene if AC utility voltage goes above:  
Your battery backup will intervene if AC utility voltage goes below:

Outlet Control

80 → ☒ On  
82 → ☒ On  
84 → ☒ On

139 ▾ Volts  
92 ▾ Volts

74  
76

86 Apply 88 Reset

Configuration Page

Configuration Page

Internet

FIG. 9

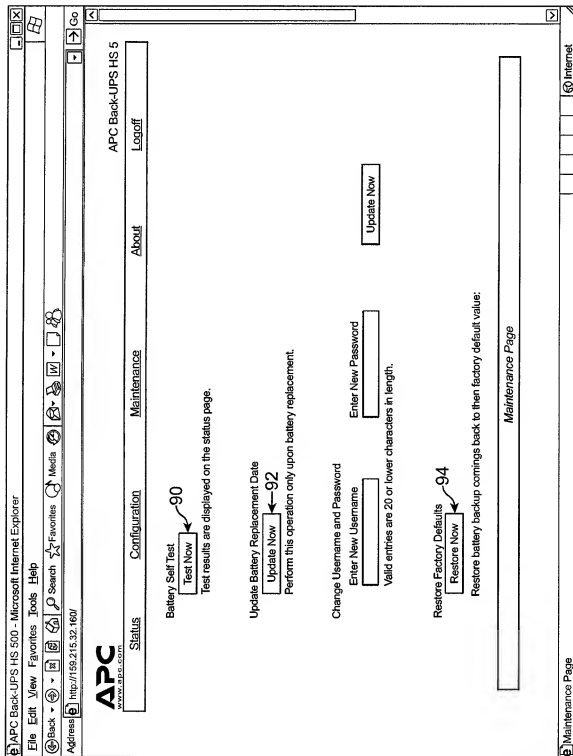


FIG. 10

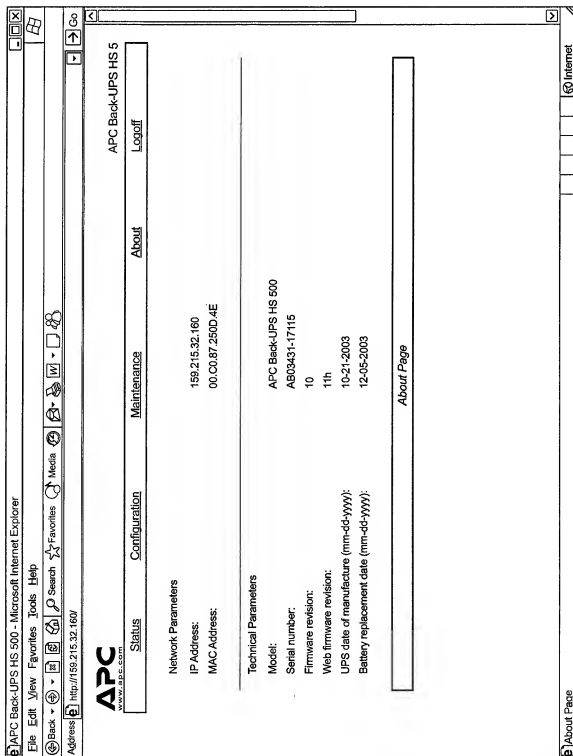


FIG. 11

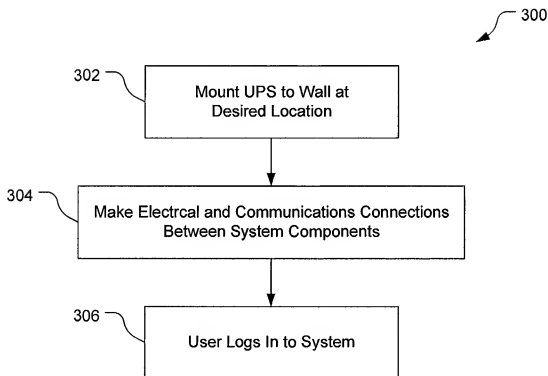


FIG. 12

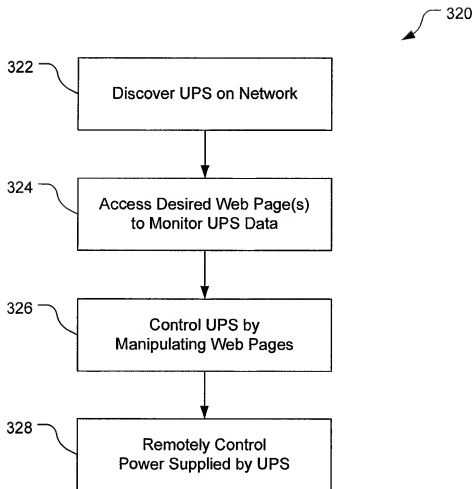


FIG. 13